

# Myrtle Beach Harley-Davidson

## Service Department

### Vehicle Maintenance Schedule

# SOFTAILS

| Item Serviced   | Procedure                          | 1,000<br>5,000 | 2,500<br>7,500 | 10,000 | 20,000 | 30,000 | DONE |
|---|------------------------------------|----------------|----------------|--------|--------|--------|------|
| Engine Oil & Filter   | Replace or Inspect Level           | R              | I              | R      | R      | R      |      |
| Oil Lines & Brake Lines   | Inspect for leaks                  | I              | I              | I      | I      | I      |      |
| Air Cleaner   | Inspect and Clean                  | I/C            | I/C            | I/C    | I/C    | I/C    |      |
| Tires   | Inspect Tread, Check Pressure      | I/C            | I/C            | I/C    | I/C    | I/C    |      |
| Wheel Spokes  | Check Tightness                    | C              |                | C      | C      | C      |      |
| Primary Chaincase Fluid   | Replace or Inspect Level           | R              | I              | R      | R      | R      |      |
| Primary Chain   | Adjust                             | A              | A              | A      | A      | A      |      |
| Transmission fluid  | Replace or Inspect Level           | R              | I              | R      | R      | R      |      |
| Clutch  | Adjust                             | A              |                | A      | A      | A      |      |
| Clutch Cable  | Adjust and Lubricate               | A/L            |                | A/L    | A/L    | A/L    |      |
| Primary Chaincase Fluid   | Replace or Inspect Level           | R              | I              | R      | R      | R      |      |
| Rear Belt and Sprockets   | Inspect, Adjust Belt               | I/A            | I/A            | I/A    | I/A    | I/A    |      |
| Throttle and Enricher Cables  | Adjust and Lubricate               | A/L            |                | A/L    | A/L    | A/L    |      |
| Clutch and Brake Levers   | Lubricate                          | L              | L              | L      | L      | L      |      |
| Kick Stand  | Adjust and lubricate               | A/L            |                | A/L    | A/L    | A/L    |      |
| Fuel Valve, Lines and Fittings  | Inspect for Leaks                  | I              | I              | I      | I      | I      |      |
| Fuel Tank Filter Screen   | Clean or Replace                   |                |                |        | C/R    |        |      |
| Brake Fluids  | Check Levels and Condition         | C              |                | C      | C      | C      |      |
| Brake Pads and Discs  | Inspect for Wear                   | I              | I              | I      | I      | I      |      |
| Brake Components: Caliper<br>Pins, Boots, Bushings  | Inspect or Lubricate               | I              | I              | I      | L      | L      |      |
| Shifter Linkage   | Inspect or Lubricate               | I/L            | I/L            | I/L    | I/L    | I/L    |      |
| Spark Plugs   | Inspect or Replace                 | I              |                | R      | R      | R      |      |
| Electrical Equipment  | Check Operation                    | C              | C              | C      | C      | C      |      |
| Electrical Switches   | Check Operation                    | C              | C              | C      | C      | C      |      |
| Electrical Diagnostic Check   | Digital Technician Computer        |                |                | C      | C      | C      |      |
| <b>All EFI Vehicles Will Receive a Printout Using our Digital Technician Computer Verifying Proper Operation at 10K's</b> |                                    |                |                |        |        |        |      |
| Engine Idle Speeds  | Check and Adjustment               | C              | C              | C      | C      | C      |      |
| Front Fork Oil  | Replace                            |                |                |        | R      |        |      |
| Steering Head Bearings -  | Adjust and Lubricate               | A/L            |                | A/L    | A/L    | A/L    |      |
| Rear Fork Bearings  | Replace                            |                |                |        | R      |        |      |
| Windshield Bushings   | Inspect                            |                |                | I      | I      | I      |      |
| Fuel Door and Saddlebags  | Lubricate Hinges and Latches       | L              | L              | L      | L      | L      |      |
| Critical Fasteners  | Check Tightness                    | C              | C              | C      | C      | C      |      |
| Battery   | Verify Charging and Connections    | V              | V              | V      | V      | V      |      |
| Road Test   | Verify Operation of All Components | V              | V              | V      | V      | V      |      |
| <b>SPRINGER MODELS</b>  |                                    |                |                |        |        |        |      |
| Steering Head Bearings -  | Adjust and Lubricate               | A/L            | A/L            | A/L    |        | A/L    |      |
| Front End Rocker Bearings   | Adjust                             | A              |                | A      | A      | A      |      |
| Wash  | Hot & Soapy with Air Blow Dry      | W              | W              | W      | W      | W      |      |

C = Clean

X = Check

V = Verify

W = Wash

R = Replace

I = Inspect

A = Adjust

L = Lubricate

With Optional Oil and Filter-----

For Synthetic Lubricant - Add

Pre 2000- Inspect and Repack Wheel Bearings - Add

\_\_\_\_\_  
Your Service Professional